




A SFR B INSTALLAZIONE-INSTALLATION-MONTAGE-INSTALLATION-INSTALACIÓN -INSTALLATIE
 INSTALAÇÃO- ΕΓΚΑΤΑΣΤΑΣΗ -MONTAŽ- МОНТАЖ - INSTALACE- KURULUM

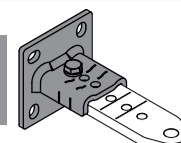

SU MURO-ON THE WALL-SUR UN MUR-AN DER WAND-EN PARED-OP STEEN -EM PAREDE-ΣΕ ΤΟΙΧΟ-NA ŚCIANIE-HA CTEHE-NA ZEĐ-DUVAR ÜSTÜNE

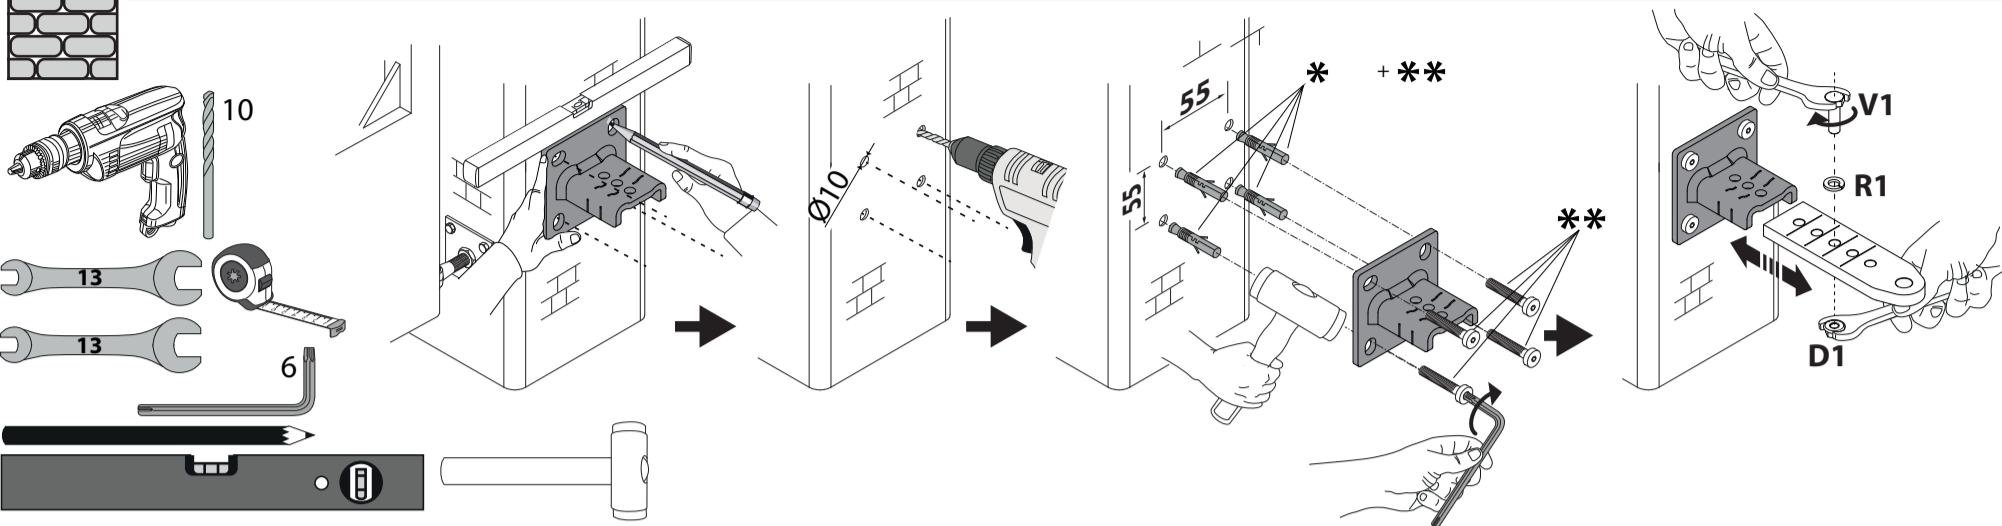


SU FERRO-ON METAL-SUR DU FER-AUF EISEN-EN HIERRO-OP METAAL -EM FERRO-ΣΕ ΣΙΔΗΡΟ-NA PRĘCIE STALOWYM- HA ΜΕΤΑΛΛΙΚΗΣΚΟΪ ΠΟΒΕΡΧΝΟΪΤΙ-DO ŽELEZA-DEMİR ÜSTÜNE

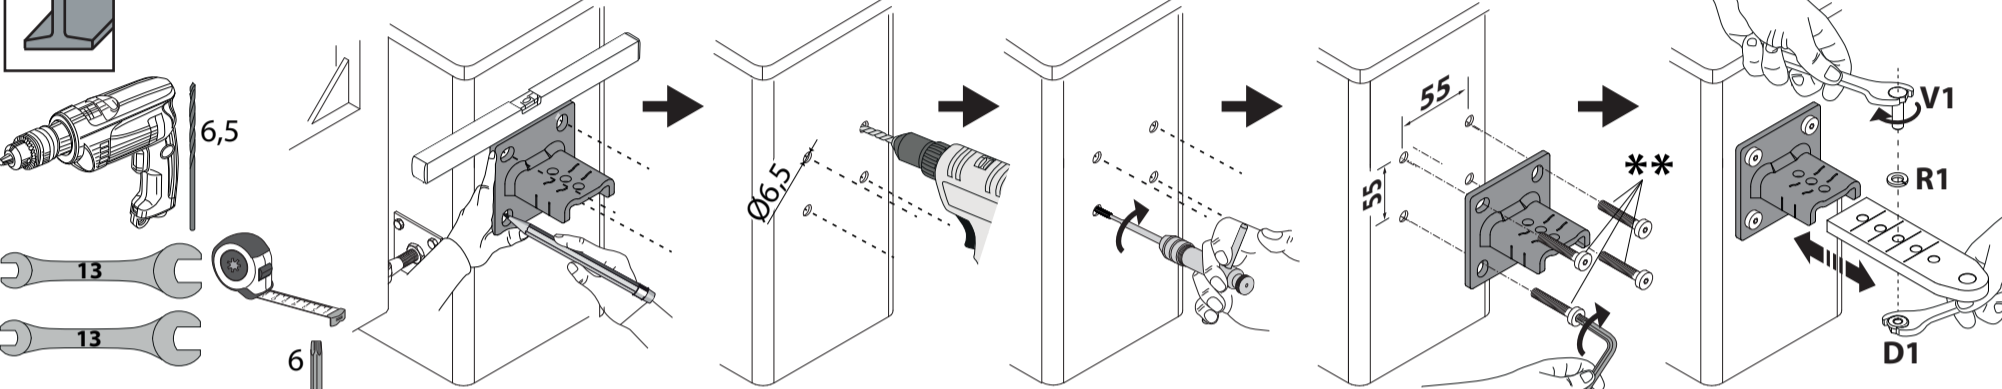


* Usare tasselli in acciaio! Use stainless steel dowels! Utiliser des chevilles en acier!
 Stahldübel verwenden! ¡Usar tacos de acero! Use buchas de aço!
 Χρησιμοποιήστε χαλύβδινα ούπα! Używać stalowych kołków!
 Использовать стальные вкладыши! Použijte ocelové hmoždinky! Çelik dübel kullanın!


** Non in dotazione! Not supplied! Non fourni! Nicht im! Lieferumfang! No suministrados! Não fornecido! Δεν παρέχονται!
 Brak w wyposażeniu! Не входит в комплектацию! Nejsou součástí dodávky! Makine tedarigi ile birlikte verilmez

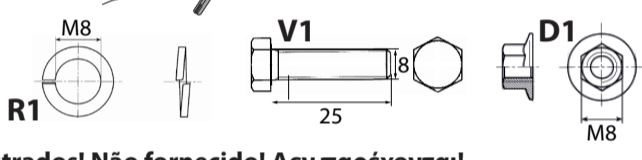


B SFR B L INSTALLAZIONE-INSTALLATION-MONTAGE-INSTALLATION-INSTALACIÓN -INSTALLATIE
 INSTALAÇÃO- ΕΓΚΑΤΑΣΤΑΣΗ -MONTAŽ- МОНТАЖ - INSTALACE- KURULUM

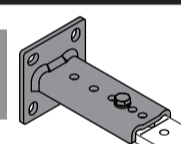

SU MURO-ON THE WALL-SUR UN MUR-AN DER WAND-EN PARED-OP STEEN -EM PAREDE-ΣΕ ΤΟΙΧΟ-NA ŚCIANIE-HA CTEHE-NA ZEĐ-DUVAR ÜSTÜNE

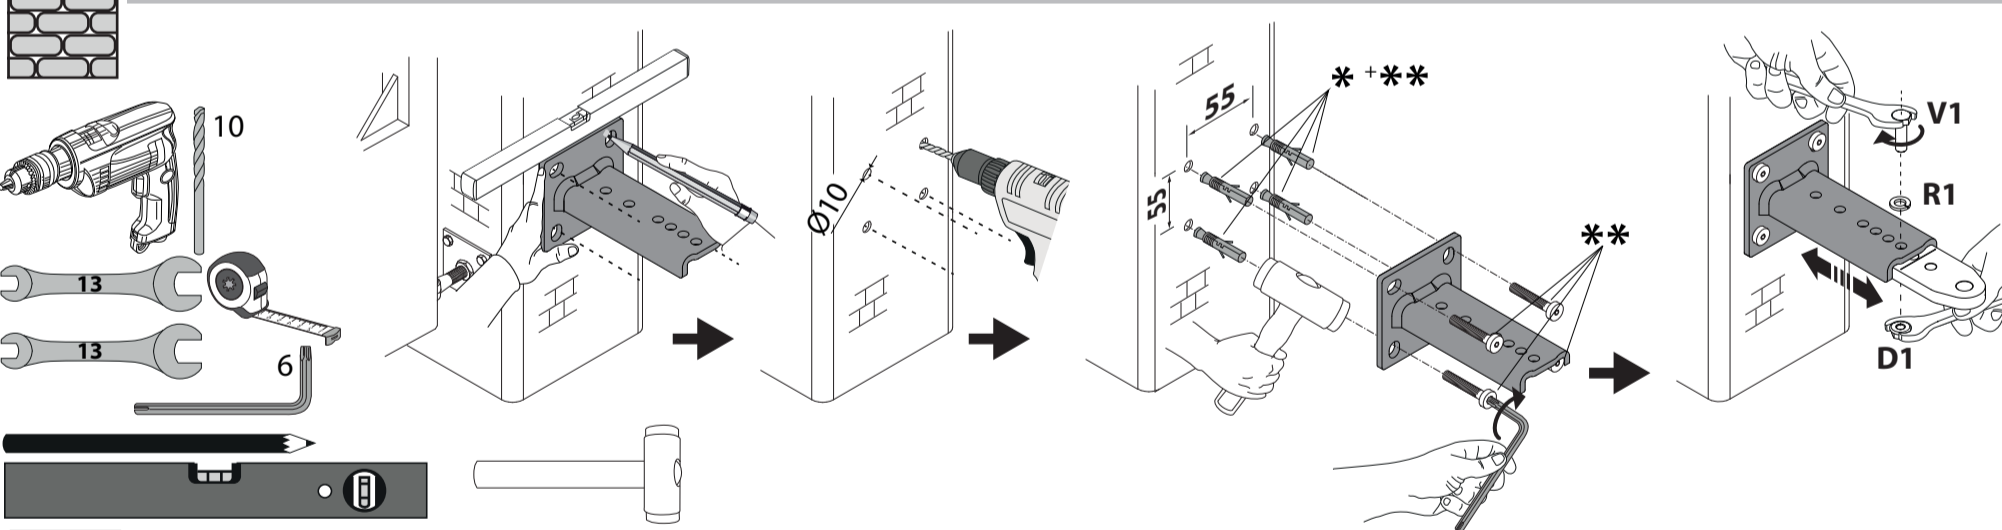

SU FERRO-ON METAL-SUR DU FER-AUF EISEN-EN HIERRO-OP METAAL -EM FERRO-ΣΕ ΣΙΔΗΡΟ-NA PRĘCIE STALOWYM- HA ΜΕΤΑΛΛΙΚΗΣΚΟΪ ΠΟΒΕΡΧΝΟΪΤΙ-DO ŽELEZA-DEMİR ÜSTÜNE

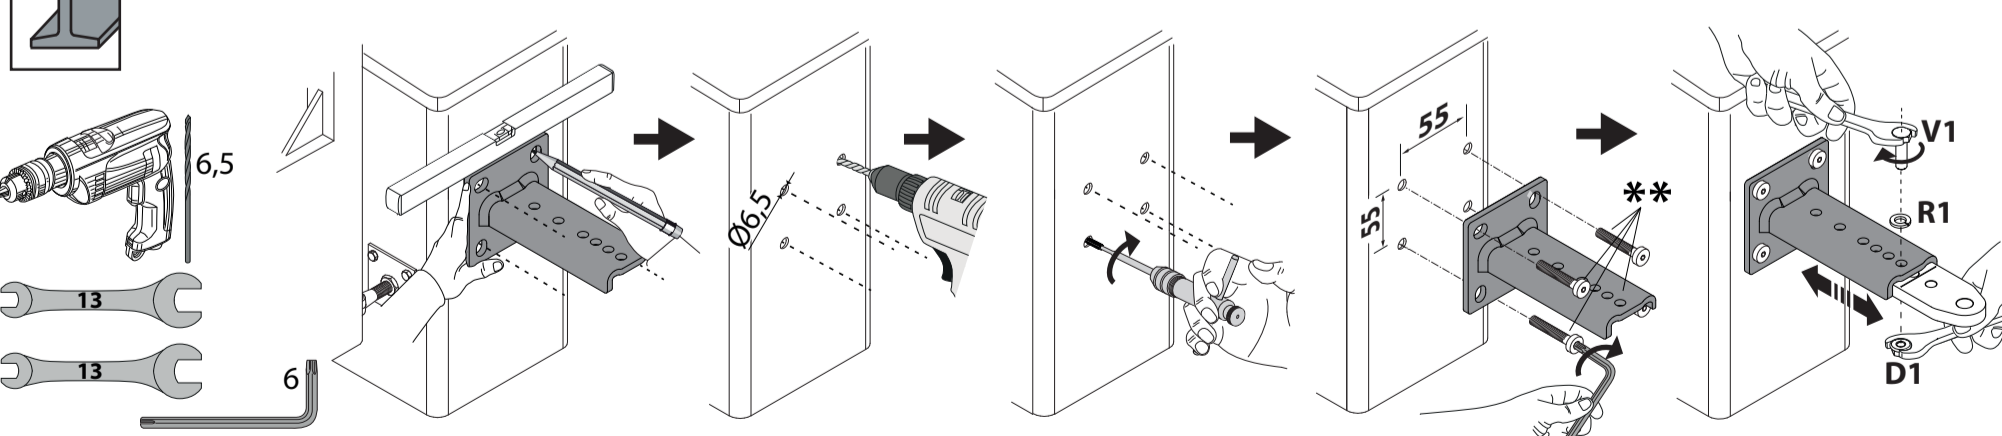

* Usare tasselli in acciaio! Use stainless steel dowels! Utiliser des chevilles en acier!
 Stahldübel verwenden! ¡Usar tacos de acero! Use buchas de aço!
 Χρησιμοποιήστε χαλύβδινα ούπα! Używać stalowych kołków!
 Использовать стальные вкладыши! Použijte ocelové hmoždinky! Çelik dübel kullanın!

** Non in dotazione! Not supplied! Non fourni! Nicht im! Lieferumfang! No suministrados! Não fornecido! Δεν παρέχονται!
 Brak w wyposażeniu! Не входит в комплектацию! Nejsou součástí dodávky! Makine tedarigi ile birlikte verilmez

